


# Scalable vehicle anti-theft combination lock

## ● HOW TO SET

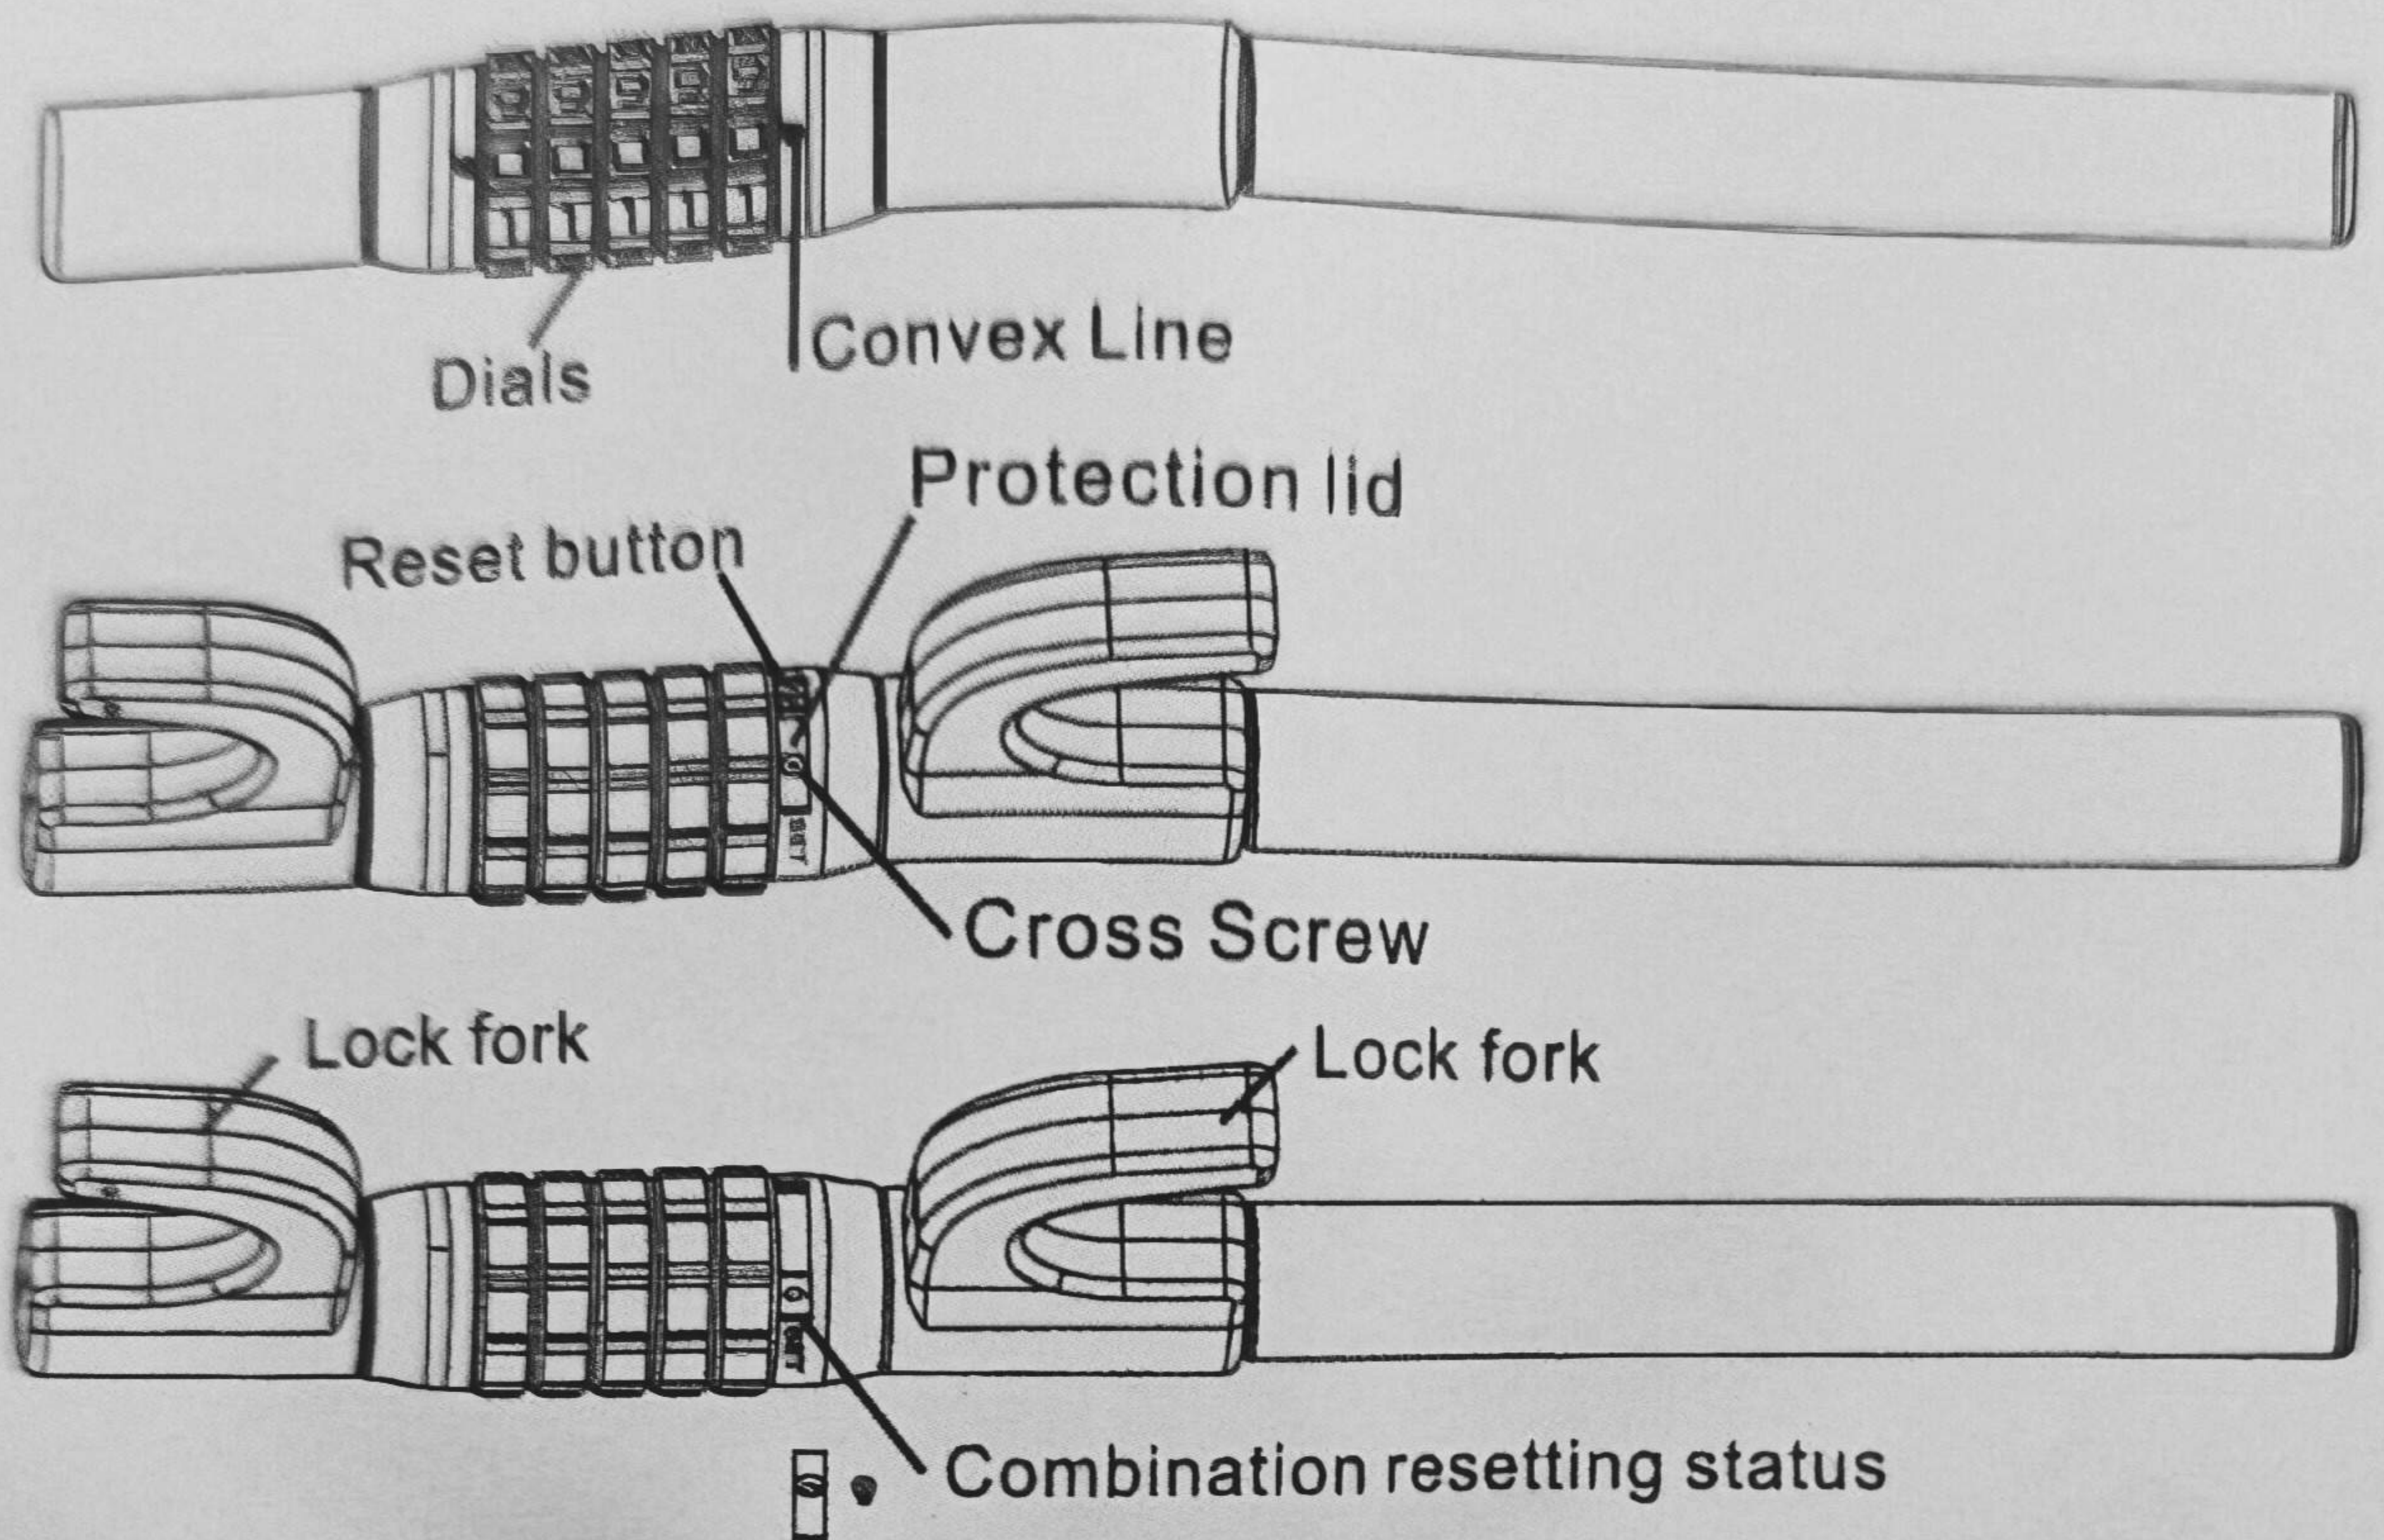

1. The original password is 0-0-0-0-0, suggest re-set your own combination follow below steps.
2. Take out the protector by using cross screwdriver.
3. Push the reset button to the "SET" position.
4. Set your own combination by turning dials, be sure the numbers are on the convex line. (e.g. 88888)
4. Put the reset button back to normal, and then lid the protector by cross screwdriver.
5. At this point, the setting is completed, your new password has been set already.

## USAGE

### How to Lock

1. The car parked, degrees off the engine, and pull the handbrake lever. Then take out anti-theft lock.
2. Select the correct combination to align with both notches.
3. Let both end of the lock cross the steering wheel ring, and then tighten the lock out the fork ends and make arbitrary code, so that the lock can no longer be opened.

### How to Unlock

1. Turn the correct combination to align with both notches.
2. Let the fork ends to inside lock away, you can remove the lock.



Warning:

Please dial the wheel to protect your password when do not use the combination lock.